

FITTING A SINGLE TV LINK (Magic Eye) OR MULTIPLE TV LINKS.

To install your TV Link you will need to run a length of coaxial cable from the socket marked RF2 on the back of you're the Digibox directly to the TV you wish to watch Sky on. Plug the cable into one side of the Link and then plug the Link directly into the TV aerial socket.

The Link requires a 'powered' output from the Digibox, and you will need to enter a 'hidden' engineers menu to achieve this. Part of the process involves entering a menu *without* any on-screen prompts. Simply follow these instructions, and do not worry if you do not see any change on the screen as you press the '0' and '1'

- Press **SERVICES**
- Press **4** for SYSTEM SETUP
- Press **0** then **1** then **SELECT** - **Do this sequence VERY QUICKLY**
- Press **4** for RF OUTLETS
- Press **down** to RF OUTLET POWER SUPPLY and turn it to on.
- Press **down** to SAVE NEW SETTINGS and Press **SELECT** to store the changes
- Press **BACKUP** to go Back to your Sky channel

Once you have done this, you will find that the little light on the TV Link will now be lit confirming that there is now power being sent from the Digibox to the remote link. Once you have tuned your TV to the Sky channel you will find you can control your digibox functions from here using a Sky remote control (or Sky+ remote control if you have a Sky+ machine)

Should you wish to use the Sky remote control to work your TV in this room (volume, mute, standby etc) you will have to program the remote to perform these functions - see "Programming your remote to control your TV functions" in your Sky digibox manual.

FITTING MULTIPLE TV LINKS

Should you wish to fit more than one TV Link and be able to watch Sky in many rooms around your house, a **powered** distribution amplifier is required. These are available in 2, 4, and 8 way versions and can be found from many vendors

FAULT FINDING



Most faults are caused by badly fitted connectors and short circuits. This causes the problems as power does not reach the link along the Coaxial cable.

If there is no LED on the link, then there is either a short on the cable or the link is faulty. Try plugging the link directly in the RF2 socket of your digibox. If it lights up there but not on the end of the cable you have run then the fault must lie in the connectors or cable.

If the link LED is on, but you cannot control the Digibox, use a short length of cable from the RF2 socket on your digibox and try the TV Link functions from there, if it doesn't work by doing this then the TV Link could be at fault.

©2005 **PM Web Consultants** – Only allowed for sale by PM Web Consultants & eBay users TELE_SAT_GSM_TECH, Shelleys_Market & Perfect Satellites. If you have received this item from another source, please report it to paul@internet-tools.co.uk