

LNB Adapter Kit

Please Note: These LNB's are Universal, and work with all style of dishes and receivers, however, Sky supply three different styles of Dish, and you may have to change the adapter on your LNB to suit your dish.

Style 1 : Old Standard – 22mm x 10mm
Style 2: Current Standard – 27mm x 17mm
Style 3: New Standard – 30mm x 22mm

Your LNB is Style 3 by default, but is easily converted to Style 2 (the most common existing style) or Style 1 (older dishes)

Before You Start:

1. Make sure you have a Philips / Posidrive screwdriver to hand.
2. Note that the arm that comes out of the LNB is *not* exactly vertical/perpendicular to the LNB – THIS IS NORMAL, and is set correctly for the UK



1. Remove the existing arm off the LNB



2. Discard the existing arm, and unpack the new arm + components



3. Peel the backing off the almagamating tape and wrap around the neck of the LNB so that the tape overlaps over itself a little.



4. Position the new arm so that the plastic nobble lines up with the number 3 on the side of the LNB

NOTE: Ensure that you line up the plastic nobble with "3" so that it looks slightly off-centre as shown in this picture



5. Insert the Nut + Bolt and tighten. This is now suitable for a Type 1 dish.



6. Add the insert as shown (there is a notch out of the 'top' side half of the insert) for dishes that are 'Type 2' (This is most recent dishes)

